


# Simpson Panel


Direct Application  
Installation Guide

**simpson.** panel

**Figure "A"**

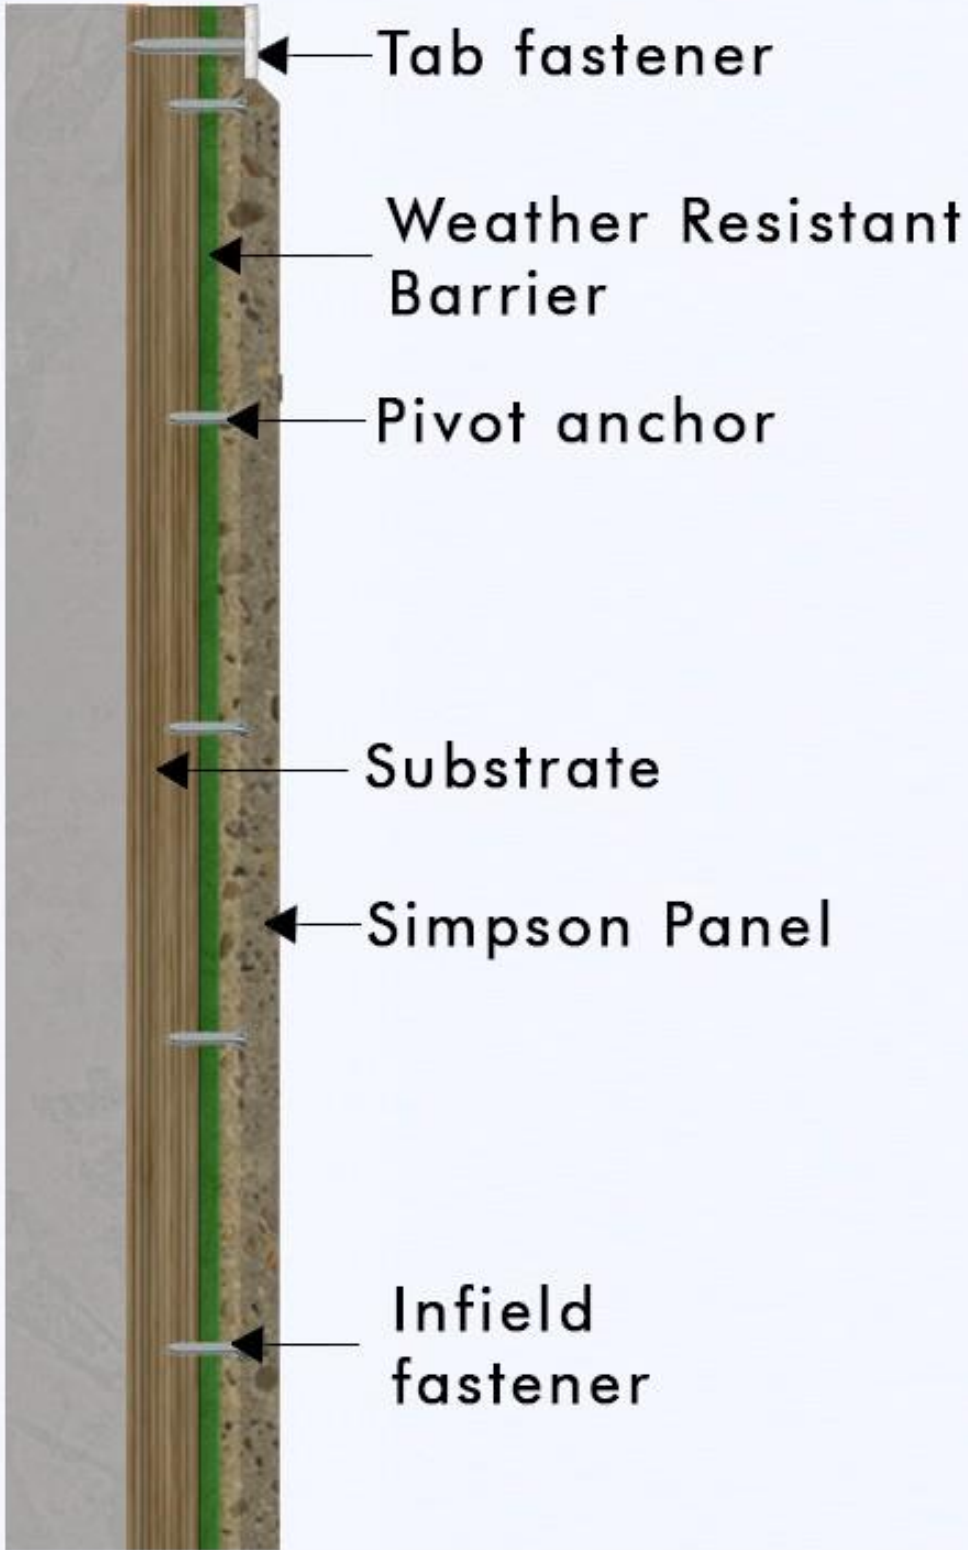

**Figure "B"**

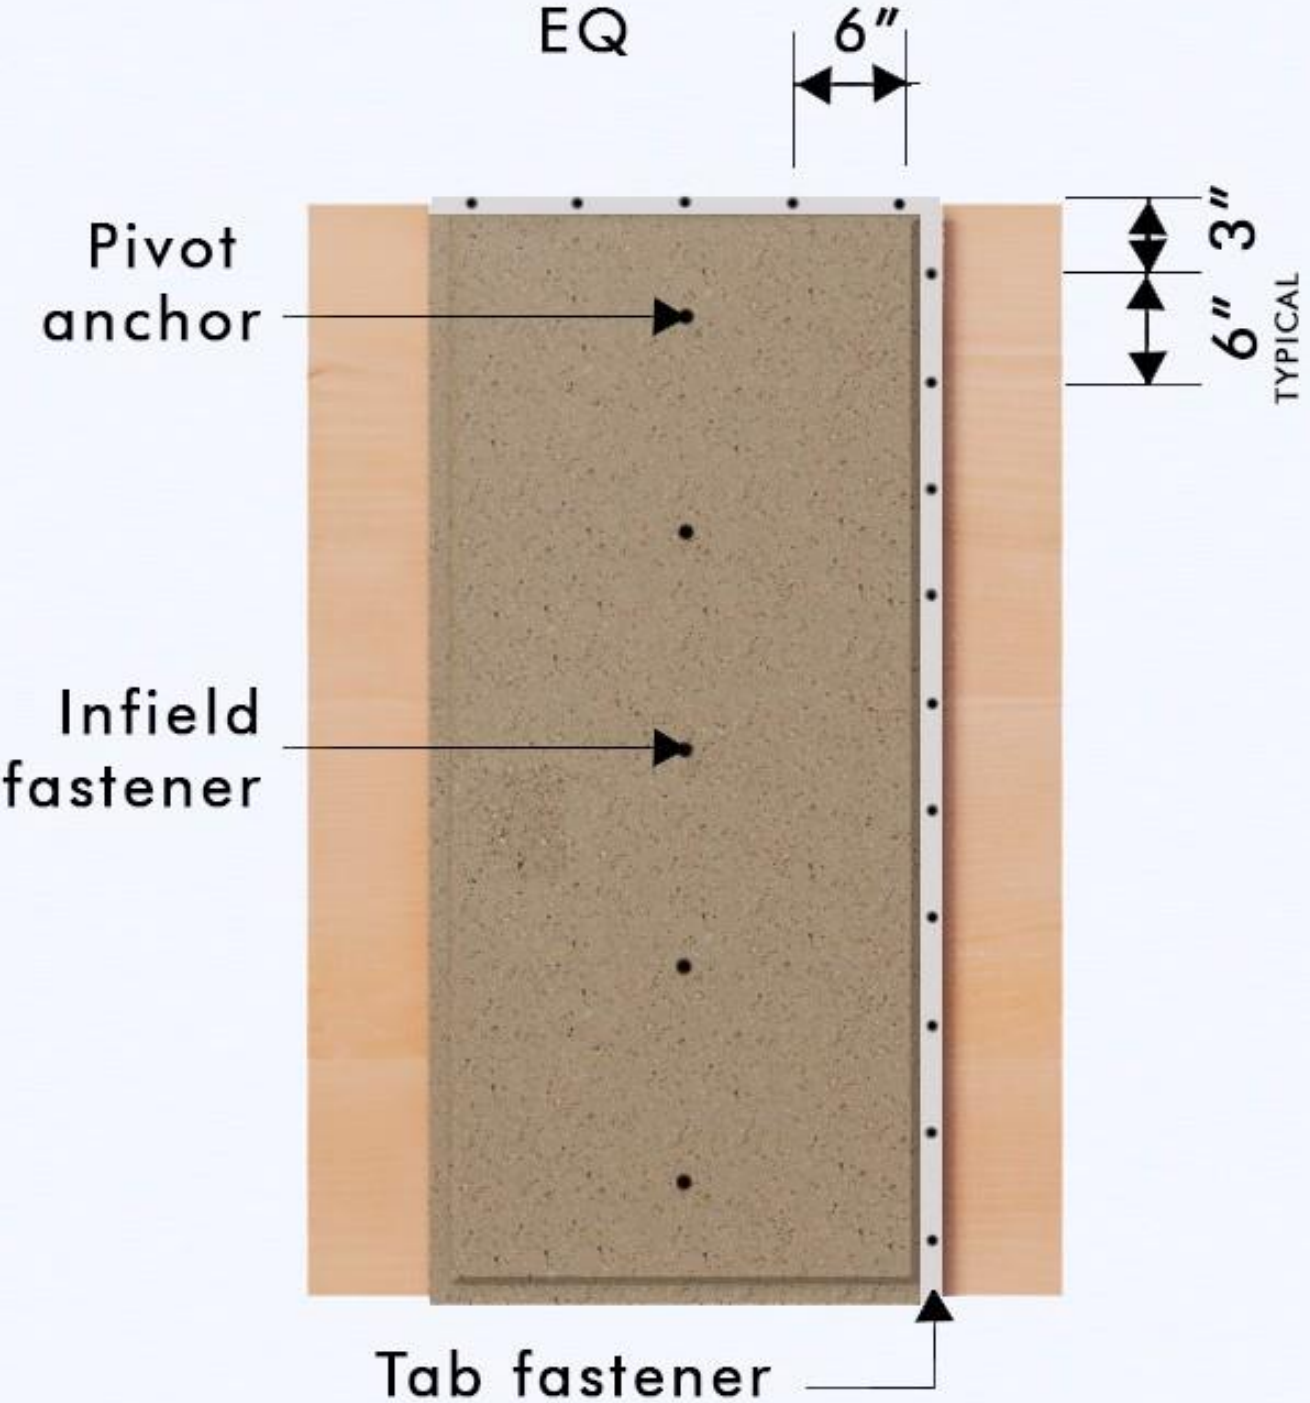


**Figure "C"**

Substrate	Fastener
1/2 - 3/4" plywood	#8x 1-1/2 Ext. Decking screw
wood stud	#8 x 2 Ext. Decking screw
CMU/ Concrete	3/16 x 1-3/4 Flat Head tapcon
Metal stud	#8 x 2" Ext Self-drilling screw
1/2" - 3/4" plywood	1/4" x 2-7/8" headlock flathead screw



1. Determine where the top of the panel will be and mark it as Top of Panel.



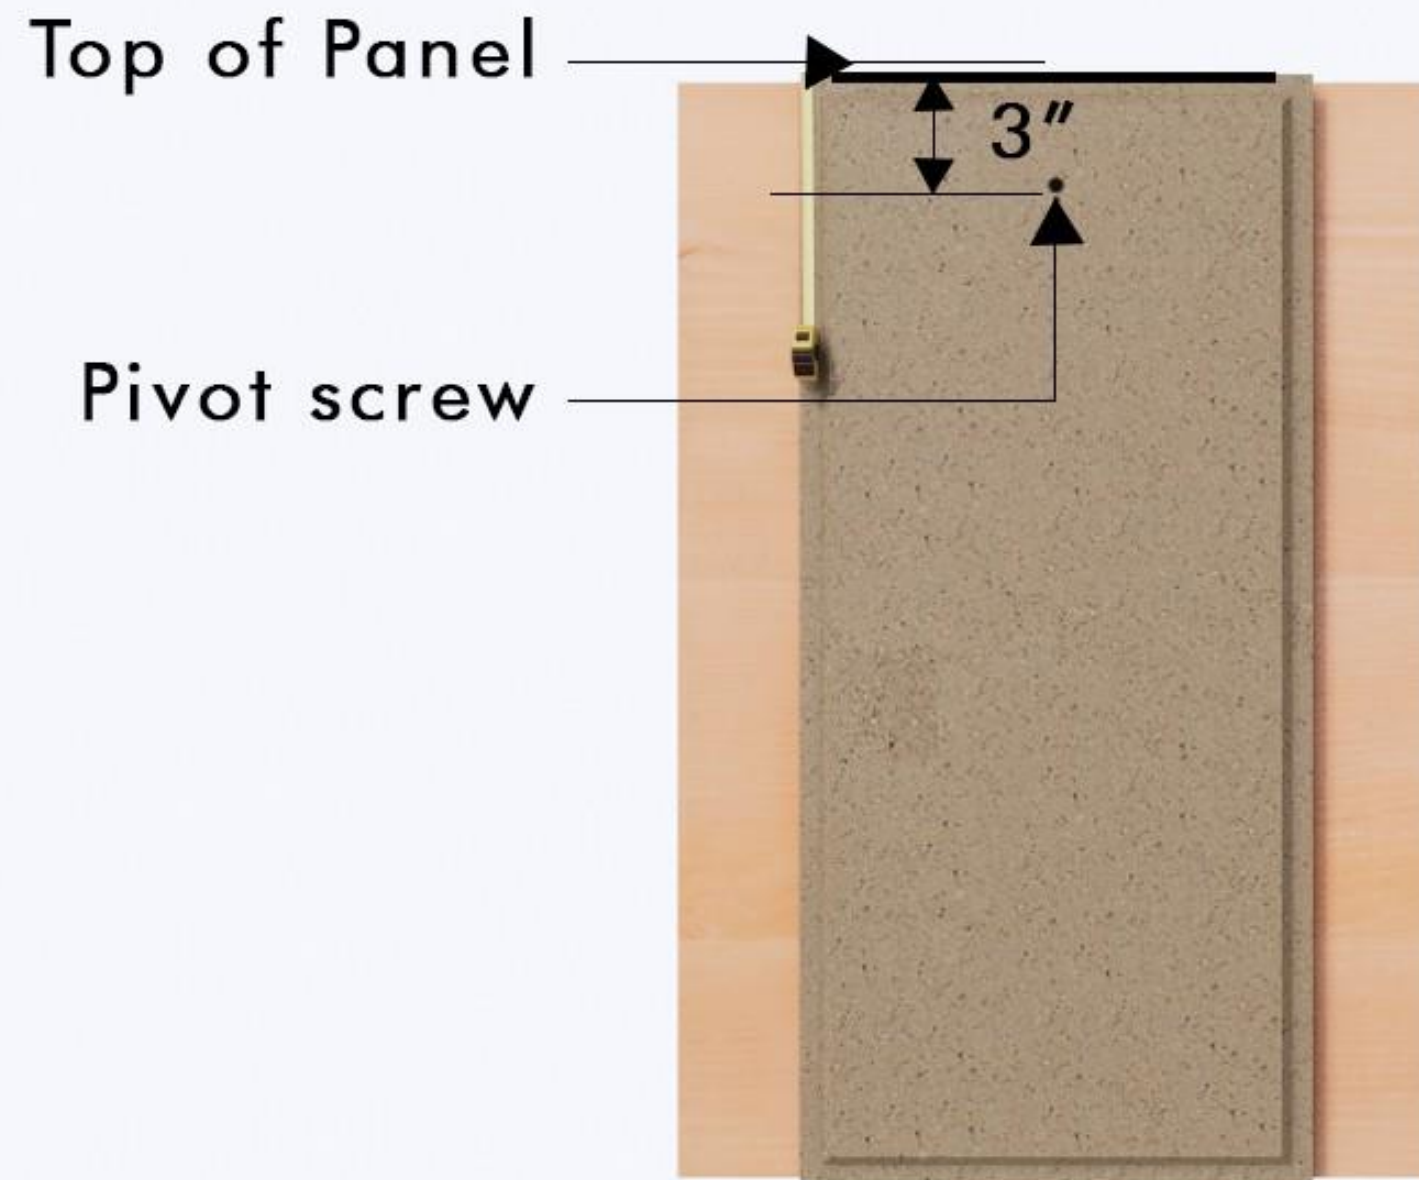

2. Place top of panel on mark and install pivot anchor 3" from the top edge. See figure "B".




3. Level panel vertically and install remaining infield fasteners. See figures "A" and "B."




4. Install specified fasteners in tab 3" from ends and spaced evenly every 6". Use perforated holes for proper spacing.



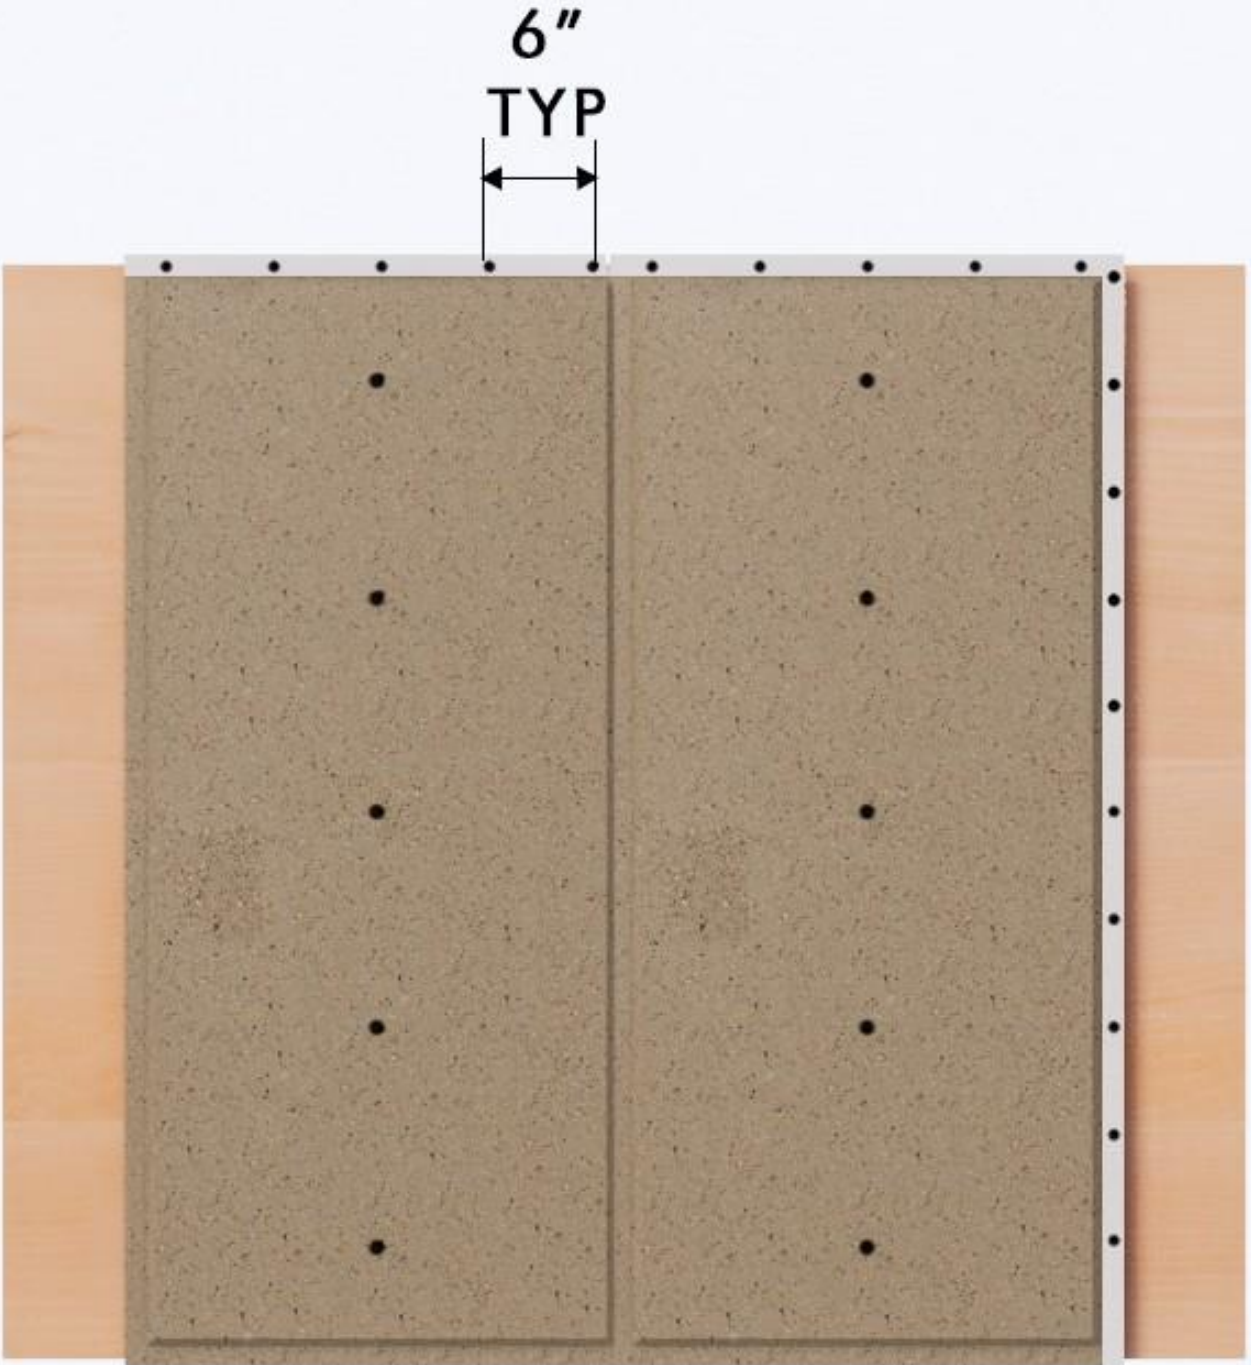

- 5. Install the second panel by installing it snug to the first panel and install screws at the tab and at the pivot but not at the finished edge where the panel adjoin.

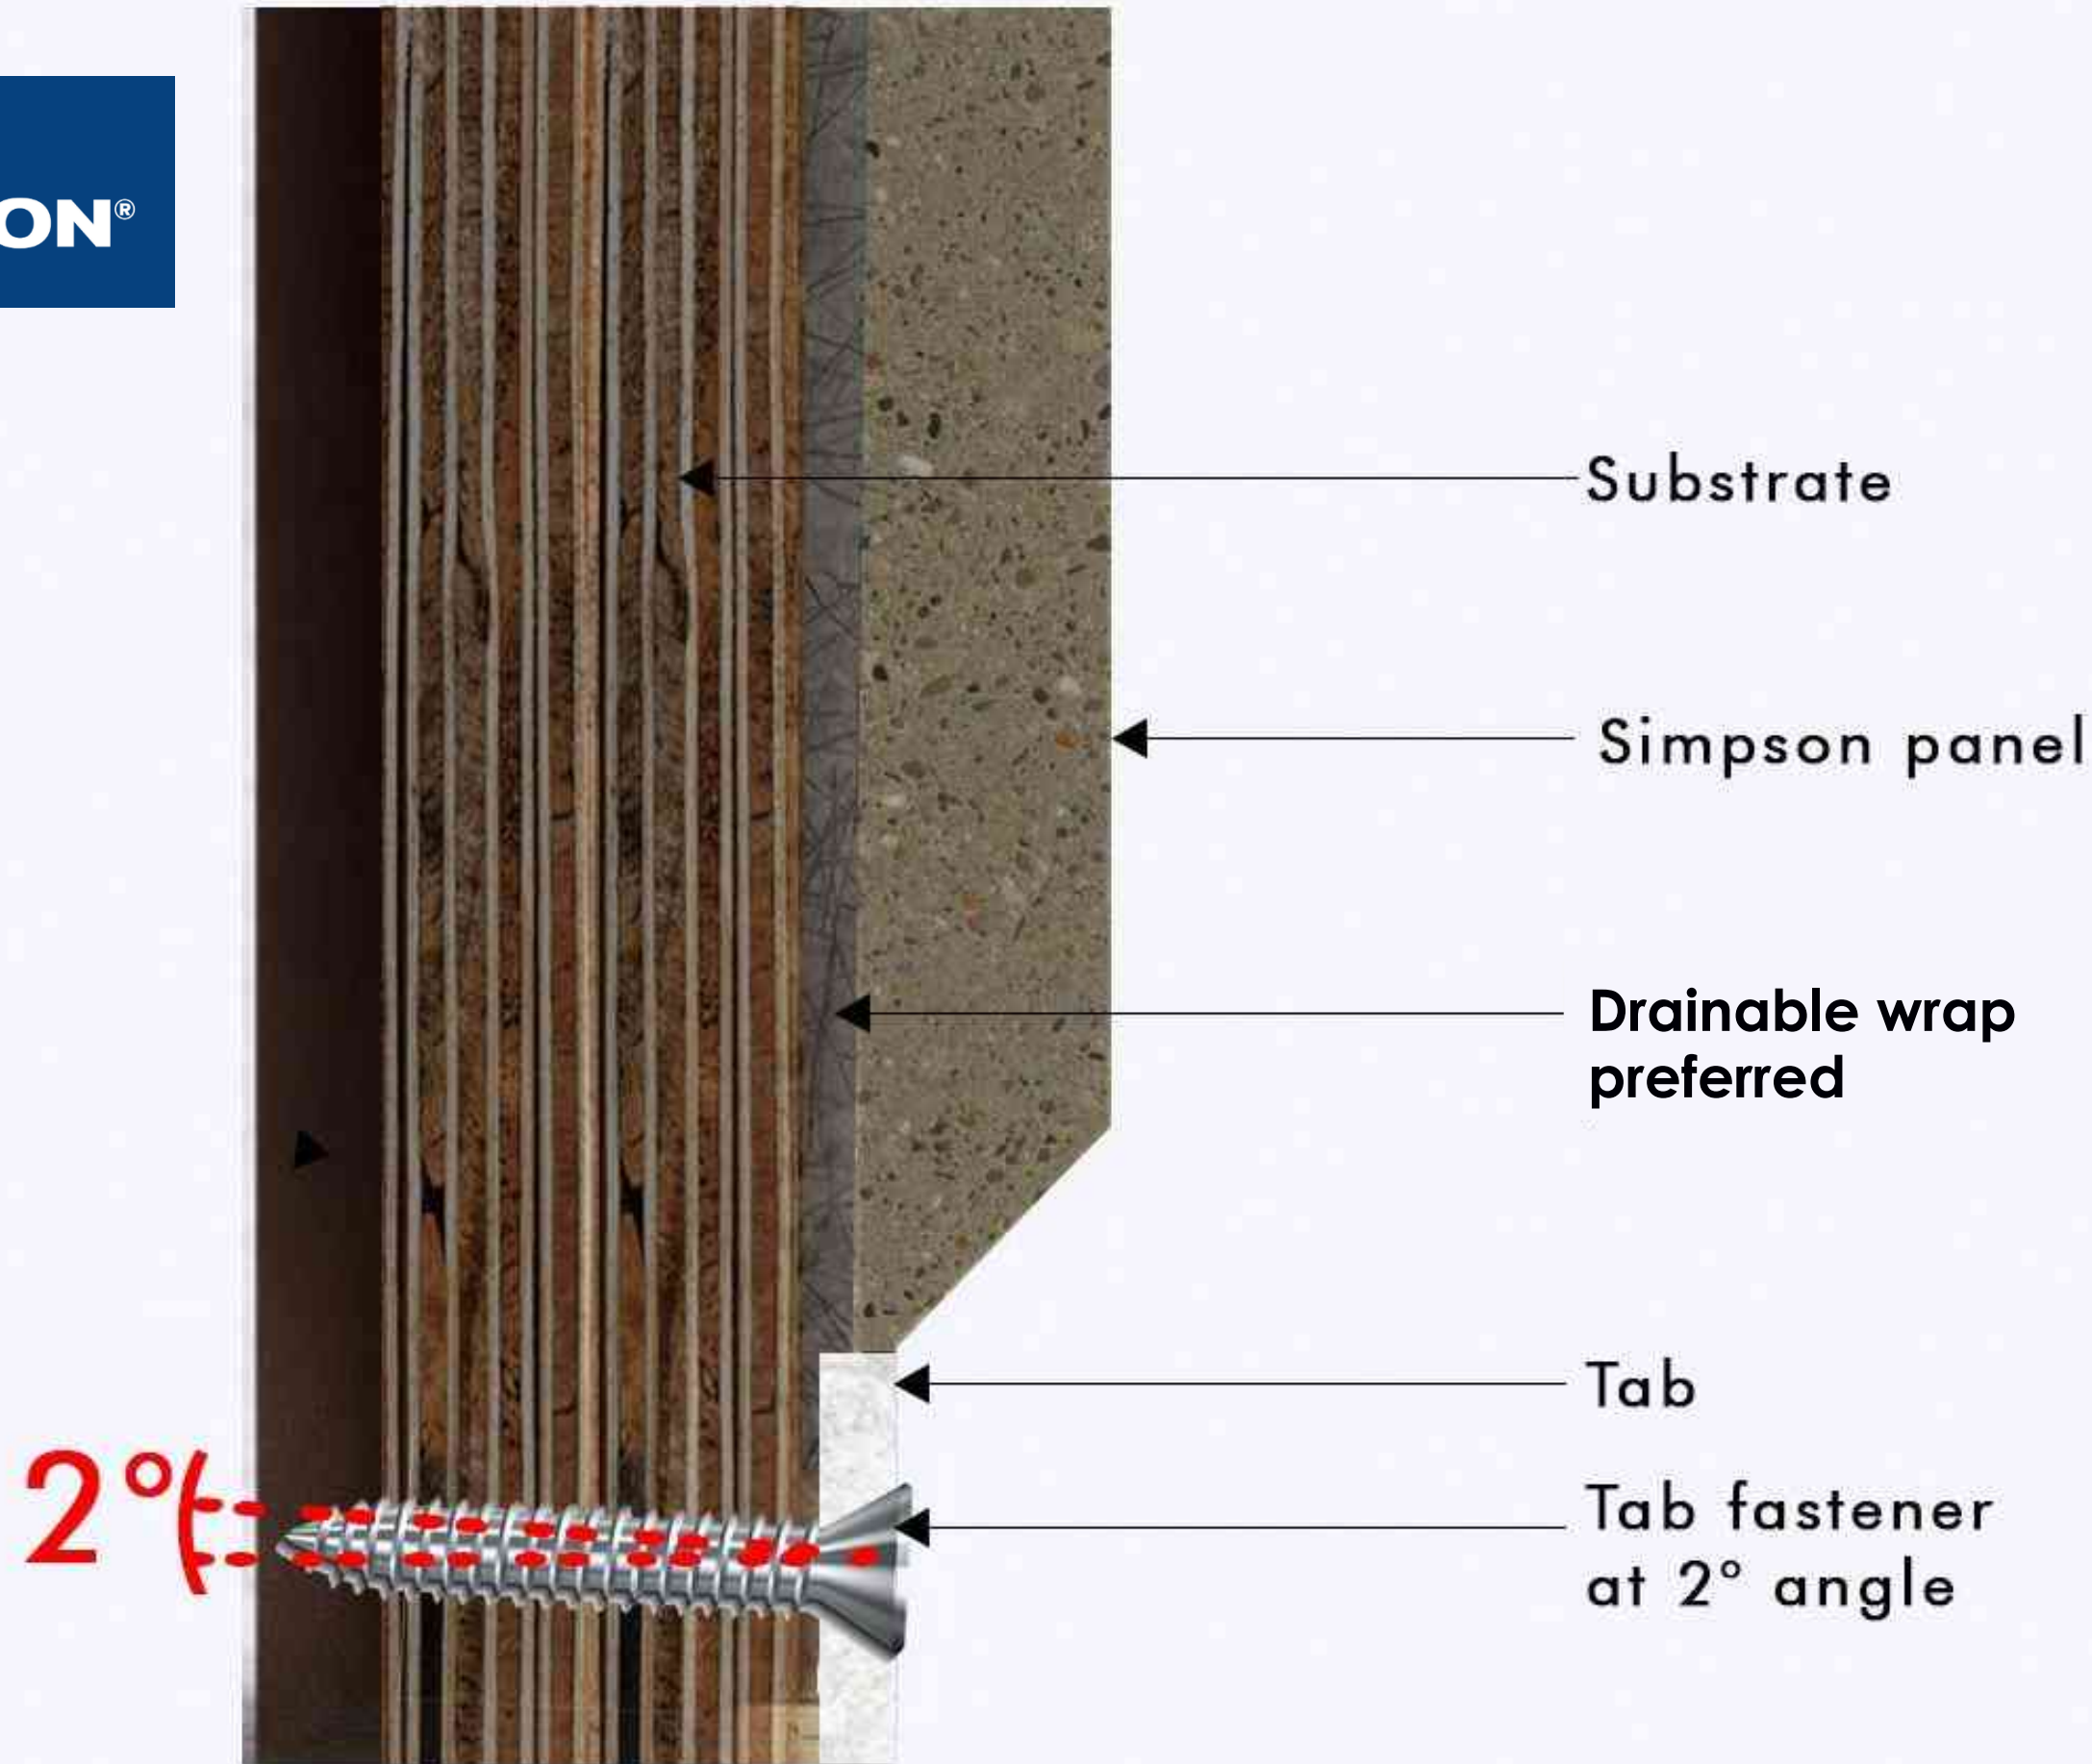

6. Install specified fastener (see Figure "C") in tab on a slight 2° angle and flush head of fastener.